



## NEON BLAZE V3 TRANSMITTER SETTINGS

To enter the menu, press the 'ENT' button once the transmitter has initialised.  
The default settings are as follows:

ELE – NOR  
AILE – NOR  
THRO – NOR  
RUDD – REV  
GEAR – NOR  
PIT – REV  
AUX – OFF

EXP – OFF – With this set to ON the 2 dials on top of the Tx become live to adjust the exponential settings.

PLT PIT – Whilst this option is flashing, the 2 dials adjust Pitch Length and Pitch Initial starting points.


RUDD MIX – REV

RUDD MIX GYRO – With this option flashing the 2 dials adjust the Gyro gain and rudder mixing.

6CH – Here you can adjust the Transmitter between 4 and 6 channel modes.

STICK MOD – This adjusts the Tx between the 4 modes / layouts used by pilots. In the box it is set to Mode 2 (Throttle on the left)

The Swashplate settings for the Neon Blaze V3 should give this diagram on the transmitter:

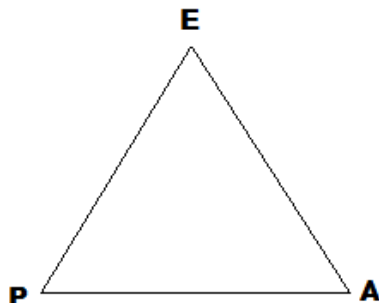

CENTURY UK LTD  
7, Anchor Business Park  
Castle Road, Sittingbourne, KENT  
ME10 3AE  
*Tel;* 01795 437056, *Fax;* 01795 439005  
Reg No. 4841366, Vat No. 787 6334 78