



RAZOR CX TRANSMITTER SETTINGS

To enter the menu, press the 'ENT' button once the transmitter has initialised.
The default settings are as follows:

ELE – NOR
AILE – REV
THRO – NOR
RUDD – REV

The BUZZ setting is down to personal preference and will turn the 'beep' that indicates a button has been pressed on or off.

CENTURY UK LTD
7, Anchor Business Park
Castle Road, Sittingbourne, KENT
ME10 3AE
Tel; 01795 437056, *Fax;* 01795 439005
Reg No. 4841366, Vat No. 787 6334 78